
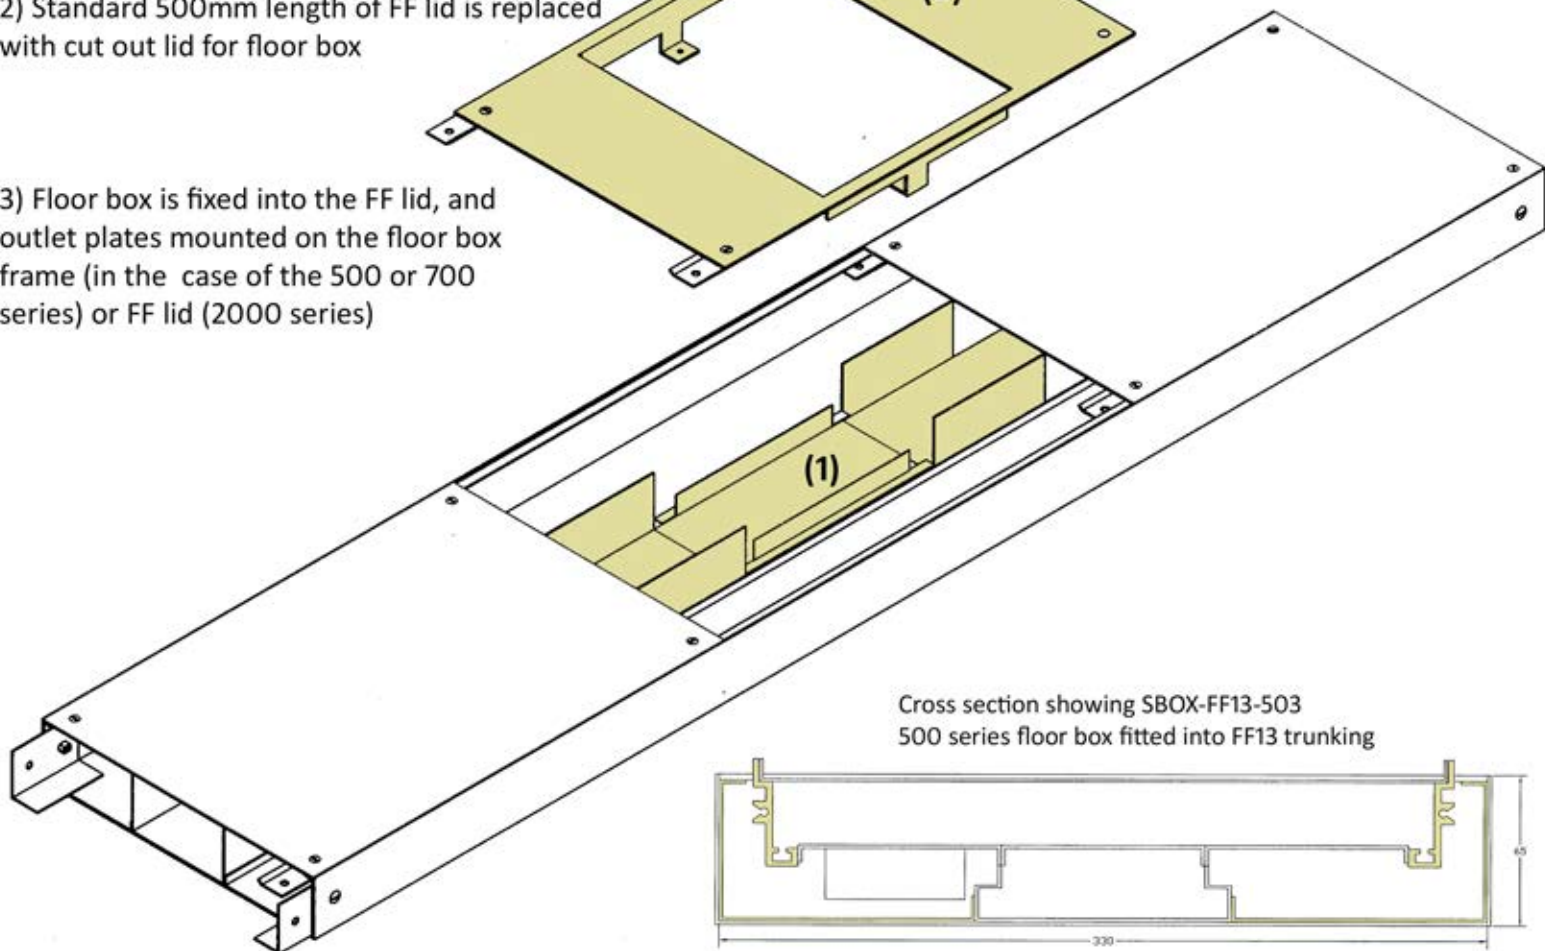


### Installing a floor box in flush floor trunking

1) Standard length of 500mm channel is replaced with service box segregation channel

2) Standard 500mm length of FF lid is replaced with cut out lid for floor box

3) Floor box is fixed into the FF lid, and outlet plates mounted on the floor box frame (in the case of the 500 or 700 series) or FF lid (2000 series)

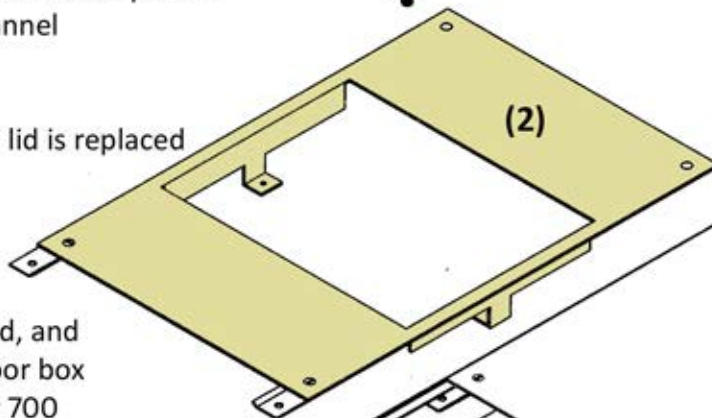

Cross section showing SBOX-FF13-503  
500 series floor box fitted into FF13 trunking

